


AMB-02B INSTRUCTION

Profile of AMB-02B board

Below is sketch map of AMB-02B board:

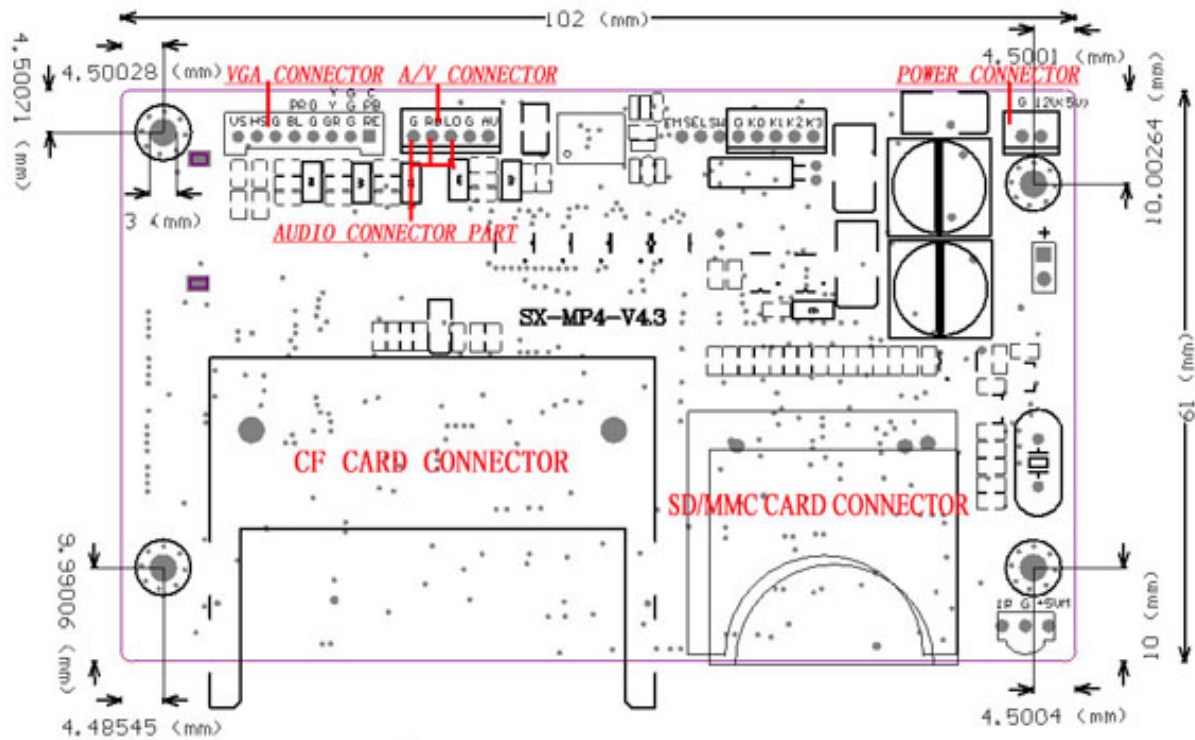

Output of AMB-02B board

DC power: +12V

Remote receiver (COM5) : +5VM, G, IR

VGAoutput: HS、VS、G、GR、RE、BL

RCAAV output: AV、G、RO、AG、LO

Colo(u)r aberration: G、Y、Pb、Pr

Files format

Support MPEG-1, MPEG-2, MPEG-4, DVD(filename.vob), JPEG and MP3 formats.

Remote Control

Below is sketch map of remote control:



Menu: The navy-blue Menu key is for LCD screens, not for AMB-02B board.

▲: Add volume.

▼: Reduce volume.

Video: Video output switching, press this key to switch output of VGA, Component, S-output, Y-P, interlace RGB.

Audio: No data value.

Movie: Movie playing form.

Music: Music playing form.

Photo: Photo slide show

File: Document list form.

Setup: System setup menu.

Return: Press this key to get back from some forms to start form.

Copy: To choose the memory card when power on. Press this key to copy all content of this memory card to hard disk automatically. If you want to exit, press "■" key.

Aspect keys: "→", "←", "↑", "↓".

Enter: confirm key.

Mute/FM: Mute sound in default form. Can choose Audio FM transmit function, Press this key 3 times, each function should be 87.7MHz, 87.9MHz, stop FM function.

EQ: Sound form selection.

Disp: Display information of files and operation.

Zoom: Zoom in pictures

Slow: Slow motion of video file, slide show of photos.

Mode: Music playing mode selection, include random playing, playing all continuously,

single file playing, ordinary playing.

Power on

When power on the board, if not one memory card on board, the screen will display memory card. Press “↑” or “↓” to choose memory card and press “**Enter**” key to entry menu of that memory card. If only one memory card on board, play all files continuously. If not memory card on board, The screen will display “**NO MEDIA DETECTED**”. If you press “**Setup**” key to entry menu, please press “→” or “←” to choose setup item.

Photo display

Press “■” key to stop playing and press “**Return**” key to start mode. Press “**PHOTO**” symbol to entry photo display mode. If has JPG photos in memory card, the screen will display photo list. Press “→”, “←”, “↑”, “↓” key to choose photo, press “**Enter**” key to display this picture fully on screen. In photo playing, you can do following operation:

Press “→” key: Rotate photo clockwise.

Press “←” key: Rotate photo counter-clockwise.

Press “**Zoom**” key: Zoom in photo, and press “→”, “←”, “↑”, “↓” key to move photo.

Press “⏭” key: Display next photo.

Press “⏮” key: Display previous photo.

Press “**Slow**” key: Switch to slide show, display photos with background music if has music files in memory card.

Press “**EQ**” key: Photo switch mode selection.

Music playing

Press “■” key to stop playing and press “**Return**” key to start mode. Press “**MUSIC**” symbol to entry music playing mode and display music list. Press “↑”, “↓” key to choose music file, the file which you chosen will play automatically. Press “**Enter**” key to interface of music. When you get playing interface of music, you can do following operation:

Press “||” key: Switch pause and play.

Press “■” key: Stop playing and return to music list.

Press “⏭” key: Speed up, can reach 8 double speed, press this key many times to switch 2X/4X/8X/.

Press “⏮” key: Speed back, can reach 8 double back speed, press this key many times to switch 2X/4X/8X/.

Press “⏮” key: Display previous music file.

Press “⏭” key: Display next music file.

Press “**Mute/FM**” key: Mute sound.

Press “**EQ**” key: Sound mode selection.

Video playing

Press “**■**” key to stop playing and press “**Return**” key to start mode. Press “**VIDEO**” symbol to entry video playing mode. The screen will display video files list in contractible pictures. Press “**↑**”, “**↓**” key to choose video file and press “**Enter**” to play video file.

When playing video file, you can do following operation:

Press “**||**” key: Switch pause and play.

Press “**■**” key: Stop playing and return to video list.

Press “**▶▶**” key: Speed up, can reach 8 double speed, press this key many times to switch 2X/4X/8X/.

Press “**◀◀**” key: Speed back, can reach 8 double back speed, press this key many times to switch 2X/4X/8X/.

Press “**◀**” key: Display previous video file.

Press “**▶**” key: Display next video file.

Press “**MUTE/FM**” key: Mute sound.

Press “**Slow**” key: Slow motion of video file.

File

Press “**■**” key to stop playing and press “**Return**” key to start mode. Press “**FILE**” symbol to entry file and catalog list. Press “**↑**”, “**↓**” key to choose file, and press “**Enter**” to play the file.

When playing the file, press “**Disp**” key to choose “copy”, “delete”, “rename” commands and so on.

COPY function

Press “**■**” key to stop playing and press “**Return**” key to start mode. Press “**FILE**” symbol to entry file and catalog list. Press “**↑**”, “**↓**” key to choose file which you want to copy, and press “**Disp**” key, Choose **COPY** command to copy, then press “**Enter**” key to confirm and press “**→**” key to choose target folder where you want to copy, and then press “**←**” key to return to the file and press “**Enter**” key to confirm copy. The copy action will be finished when the screen display “FINISHED”. Press “**RETURN**” key to exit.

Other functions

Timer function

Press “**■**” key to stop playing and press “**Return**” key to start mode. Press “**Time**” key to

timer interface. Press “→” or “←” to move cursor and press “↑” or “↓” key to set time.


Remember function (optional)

When playing a file, the power is switch off suddenly. Then power on again, will play from area where stopped.

Comment: JPG photos without this function.


Setup

1. Press “**SETUP**” key to go to SETUP MENU, press “↑” or “↓” key to choose item you want setup, then press “**Enter**” key to confirm.

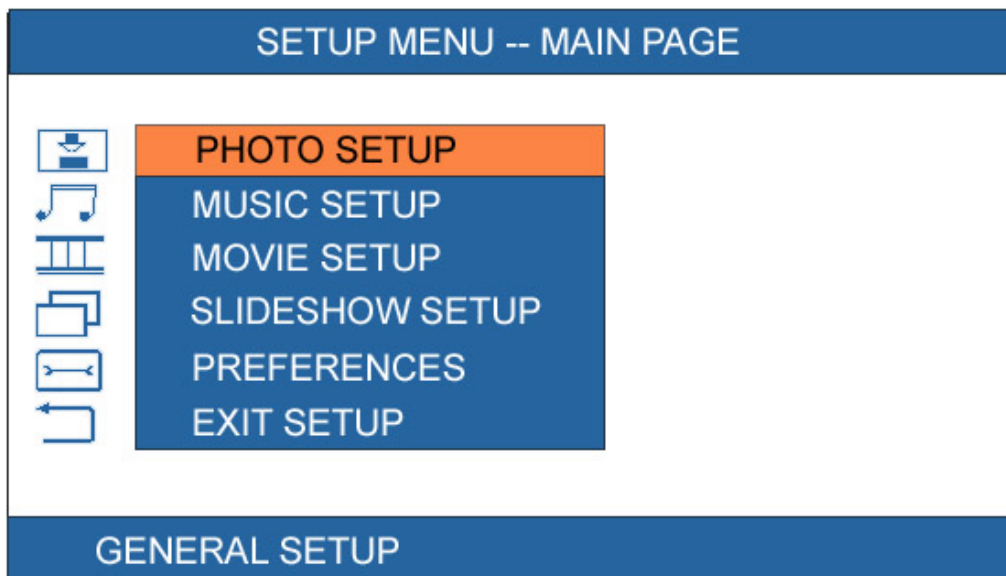

DEMO

2. When press “**Enter**” key, will display submenu. Press “→” or “←” key to entry or return submenu and press “↑” or “↓” key to setup.

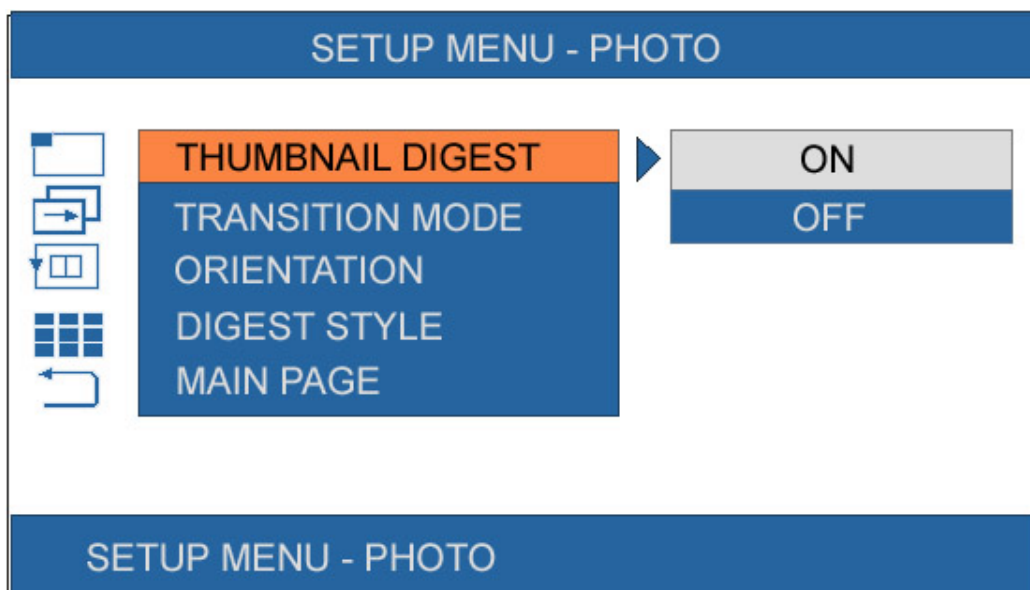

DEMO

3. Move cursor to MAIN PAGE and press “**Enter**” key to exit setup.